



TRIGGER

LIVE

TRIG. OUT \

(5-0A04)

PULSE IN

(00A115)

EXT TRIG. IN

(5VCM08)

TRIG. ENABLE

(5VCM08)

USB

IGNORE

TRIG ENABLE

USB

I/O

POWER

NEUTRON
TRIGGER

UCSB
HEP

1.25 in